

GB

PROGRAMME CHART



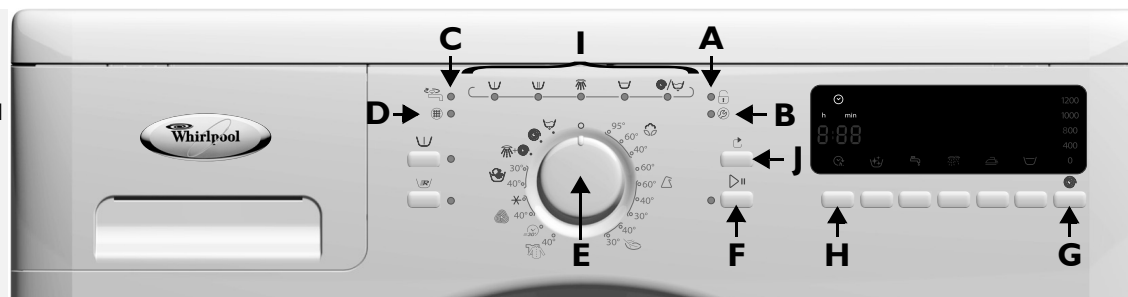
A. "Door open" indication

This washing machine is equipped with automatic safety functions which detect and diagnose faults at an early stage and react appropriately, e.g.:

B. "Service" indication

C. "Water tap closed" indication

D. "Clean pump" indication



E. Programme selector

F. "Start/Pause" button

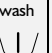
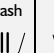

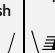
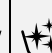


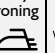

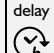
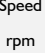


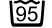

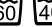


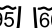

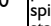
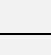
 
 
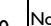

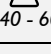
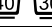

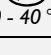
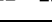
 
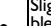
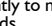

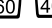
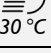







G. "Spin" button

H. "Start delay" button

I. Programme sequence indicator



J. "Reset" button

| Programme | | | Care Labels | Max. Load kg | Type of wash/Notes - Respect the manufacturer's recommendations on the care label | Detergents and additives | | | Special options | | | | | | | | Max. Spin Speed rpm | |
|-------------------------------|-------------------------------|--|---|-----------------|---|---|--|---|---|--|---|--|--|---|---|---|------------------------|--|
| | | | | | | Pre-wash  | Main wash  | Softener  | Pre-wash  | Rapid  | Clean+  | Cold wash  | Intensive rinse  | Easy ironing  | Rinse hold  | Spin  | | Start delay  |
| Cotton 95 °C | Cotton 95 °C |  |  | 7.0 | Normally to heavily soiled and robust white cotton laundry. In case of heavy soiling or stains, you can add an oxygen-based bleach additive which can be used at 95°C. This programme eliminates bacteria, ensuring sanitization of your laundry. | * | Yes | * | * | — | * | — | * | * | * | * | * | max. |
| Cotton 40 - 60 °C | Cotton 40 - 60 °C |  |   | 7.0 | Normally to heavily soiled bed linen, table linen and underwear, towels, shirts etc. made of cotton and linen. | * | Yes | * | * | * | * | * | * | * | * | * | * | max. |
| SuperEco 60 °C | SuperEco 60 °C |  |    | 7.0 | Heavily soiled and robust laundry made of cotton, synthetics and their blends. Economical energy consumption by prolonged wash duration - ideal to be run overnight to profit from more favourable energy rates. Avoid noise of spinning at night by setting the spin speed to "0" and start spin programme in the morning, or by defining programme start with "Start delay" accordingly. - For garments with a high share of synthetic fibres, we recommend to use a laundry net. | — | Yes | * | — | — | — | * | * | — | * | * | * | max. |
| Synthetics 30 - 40 - 60 °C | Synthetics 30 - 40 - 60 °C |  |     | 3.0 | Normally soiled garments made of artificial fibres (like polyester, polyacryl, viscose etc.) or their blends with cotton. | * | Yes | * | * | * | — | * | * | * | * | * | * | max. |
| Delicates 30 - 40 °C | Delicates 30 - 40 °C |  |   | 1.5 | Curtains and delicate clothing, dresses, skirts, shirts and blouses. | * | Yes | * | * | — | — | * | — | — | * | * | * | 1000 ¹⁾ |
| Daily load 40 °C | Daily load 40 °C |  |     | 4.0 | Slightly to normally soiled robust laundry made of cotton, linen, artificial fibres and their blends. Effective one-hour programme. Make sure to wash only similar colours together in one wash load. | — | Yes | * | — | — | — | * | * | * | * | * | * | max. |
| Quick wash 30 °C | Quick wash 30 °C |  |  | 4.0 | Shortly worn clothing made of cotton, polyester, polyamide and blends with cotton. Brief programme to refresh your laundry. | — | Yes | * | — | — | — | * | — | — | * | * | * | max. |
| Wool Cold - 40 °C | Wool Cold - 40 °C |  ✱ - 40 °C |  | 1.0 | Only woollens, labelled with the Woolmark and identified as machine washable. This programme (40°C) is tested and approved by The Woolmark Company for machine washable wool. | — | Yes | * | — | — | — | * | — | — | * | * | * | 1000 ¹⁾ |
| Handwash 30 - 40 °C | Handwash 30 - 40 °C |  |   | 1.0 | Textiles made of linen, silk, wool and viscose marked as "handwashable". Care programme with a very gentle spin. This programme (40°C) is tested and approved by The Woolmark Company for handwashable wool. | — | Yes | * | — | — | — | * | — | — | * | * | * | 400 ¹⁾ |
| Rinse & Spin | Rinse & Spin |  | — | 7.0 | Same as the last rinse and the final spin in the "Cotton" programme. | — | — | * | — | — | — | — | * | — | * | * | * | max. |
| Spin | Spin |  | — | 7.0 | Intensive spin. Same as spin cycle in the "Cotton" programme. | — | — | — | — | — | — | — | — | — | — | * | * | max. |
| Drain | Drain |  | — | — | Drain only - no spinning. Alternative method of terminating programme after "Rinse Hold". | — | — | — | — | — | — | — | — | — | — | — | * | — |

= optional / Yes = dosing required.
For improved garment care, spin speed is restricted in these programmes.

The wool and handwash cycles of this machine have been tested and approved by The Woolmark Company for the washing of Woolmark garments labelled as "machine wash" or "hand wash" provided that the garments are washed according to the instructions on the garment label and those issued in this programme chart. M0619

Whirlpool is a registered trademark of Whirlpool USA

5019 301 06449

CONSUMPTION DATA

| Programme | Temperature (°C) | Load (kg) | Water (l) | Energy (kWh) | Approximate programme duration (hrs.min) ☺ | |
|------------|---------------------|--------------|--------------|-----------------|---|--------------|
| | | | | | without "Rapid" | with "Rapid" |
| Cotton | 95 | 7.0 | 74*** | 2.10 | 2:10 | — |
| Cotton* | 60 | 7.0 | 54 | 0.91 | 4:00 | 2:30 |
| Cotton* | 60 | 3.5 | 40 | 0.85 | 3:00 | ** |
| Cotton | 40 | 7.0 | 69 | 0.80 | 3:15 | 2:15 |
| Cotton* | 40 | 3.5 | 40 | 0.65 | 3:00 | ** |
| SuperEco | 60 | 7.0 | 69 | 0.84 | 4:00 | — |
| Synthetics | 60 | 3.0 | 50*** | 0.80 | 1:35 | 1:14 |
| Synthetics | 40 | 3.0 | 46 | 0.50 | 1:20 | 0:59 |
| Delicates | 30 | 1.5 | 60 | 0.50 | 0:45 | — |
| Daily load | 40 | 4.0 | 45 | 0.50 | 1:00 | — |
| Quick wash | 30 | 4.0 | 45 | 0.40 | 0:30 | — |
| Wool | 40 | 1.0 | 60 | 0.50 | 0:45 | — |
| Wool | 20 | 1.0 | 60 | <0.10 | 0:40 | — |
| Handwash | 40 | 1.0 | 45 | 0.50 | 0:40 | — |
| Handwash | 30 | 1.0 | 45 | 0.40 | 0:36 | — |

Consumption values were measured in normalized conditions in compliance with Standard IEC/EN 60 456. Consumption data in the home may vary with respect to the values in the table in relation to the water supply pressure and temperature, the load and the type of wash. Water and energy consumption refer to the default setting of the programmes; selecting special options or modifying spin speed or temperature will change the consumption data.

- ☺ The programme duration may differ from the values indicated above as it depends on the operation conditions applicable at that time (see also "Troubleshooting Guide" in your Instructions for Use).
- * Reference programmes for Energy Label.
- ** Automatic adaptation of programme duration after detection of wash load.
- *** To reduce the water temperature, some cold water is added at the end of the main wash cycle before the water is drained.

ADD DETERGENTS, CLOSE THE DOOR AND SELECT THE PROGRAMME

Add detergent as indicated on the front page and as described in the chapter "Detergent and Additives" in your Instructions for Use.

- Turn the **programme selector** to the desired programme and temperature. The display shows the programme duration and the predefined spin speed. The lamp next to the **"Start/Pause"** button ▷|| blinks.

SELECT ANY DESIRED OPTION

Push the button of any option desired - the respective indication lights up. If the combination of programme and option is not possible, the indication lights switch off automatically. Unsuitable combinations of options are deselected automatically.

"Prewash" button |

- Only for heavily soiled loads (for example sand, granular dirt). Increases the cycle time by approximately 15 min.
- Do not use liquid detergent for the main wash when selecting "Prewash".

"Rapid" button R

- Enables quicker washing by shortening the programme duration.
- Recommendable for small loads or only lightly soiled laundry.

"Clean +" button +

- Choose this option if you use an in-wash additive for stain removal (powder, for example "Vanish") - it will optimize the additive's efficiency to get better wash performance and stain removal.

- Use with maximum load.
- Add an appropriate amount of in-wash additive for stain removal (powder) to the main wash chamber, together with your detergent (only use powder detergent with this option). Respect the manufacturer's dosing instructions.
- May prolong the programme by up to 15 minutes.
- Appropriate for use of stain removers and bleaches on oxygen basis. **Chlorine or perborate bleaches must not be used!**

"Cold wash" button C

- Water is heated only up to 20°C.
- Suitable for delicate laundry items with wash temperature recommendation of max. 30° on the care label.
- Mainly selectable on the lowest temperature step of the programmes only.

"Intensive rinse" button R

- More water is added and rinse cycle is prolonged.
- This option is particularly suitable for areas with very soft water, washing baby linen and helping people with allergies.

"Easy ironing" button I

- Reduces creasing by an increased water quantity and a very gentle spin.

"Rinse hold" button U

- The laundry remains in the last rinse water without progressing to the final spin cycle to avoid creasing and prevent colours from changing.

- Particularly useful if you want to postpone spinning to a later time, or if you want to drain only.

Note: The programme stops to "Rinse hold" at the time the "Rinse hold" light in the programme sequence indication is on. The indication lamp next to the **"Start/Pause"** button ▷|| blinks.

Terminate the "Rinse hold" option U :

- Press the **"Start/Pause"** button ▷|| ; the programme will terminate automatically with the final spin cycle for the present wash programme.
- If you do not wish to spin the clothes, turn the programme selector to the "Drain" programme and press the **"Start/Pause"** button ▷|| .

"Spin" button S

- Every programme has a predefined spin speed; press the button if you want to set a different spin speed.
- If spin speed "0" is selected, the final spinning is cancelled and the water is drained out only. However, intermediate spin peaks remain during rinse.

START DELAY S

The "Start delay" S allows to run the machine at the consumer's convenience, for example at night when electricity is cheaper. Do not use liquid detergent when activating "Start delay".

- Select programme, temperature and options.
 - Press the "Start delay" button to select the desired delay time between 30 minutes and 23 hours.
 - Press the **"Start/Pause"** button ▷|| .
- On the display, the start delay symbol and the dot between hours and minutes blink. The countdown of the delay time begins.
- The delay time indication disappears when the programme starts and it is replaced by the remaining programme duration.
 - Once having pressed the **"Start/Pause"** button ▷|| , the delay time can be reduced by pressing again the "Start delay" button.

To cancel the "Start delay"

- Turn the programme selector to another position, or press the **"Start/Pause"** button ▷|| - the selected start delay disappears from the display. Press **"Start/Pause"** ▷|| again if you want to start the selected programme immediately.

PROGRAMME START ▷||

Open the tap and press the **"Start/Pause"** button ▷|| . The indication lamp next to the **"Start/Pause"** button ▷|| lights up. The programme sequence indicator shows the current programme phase, running from left to right through Wash, Rinse, Drain/Spin.



"DOOR OPEN" INDICATION I

Before starting and after end of a programme, the lamp lights to show that the door can be opened. As long as a wash programme is running, the door remains locked and must on no account be forced open. In case you have an urgent need to open it during a running programme, refer to "Cancel a running programme before the end".

FAILURE INDICATIONS

In case of any failures or irregularities, consult the "Troubleshooting Guide" in your Instructions for Use.

"Service" S

Lighting up of the "Service" indication can be caused by a fault in an electrical component.

"Water tap closed" C

The washing machine has no or insufficient water supply; the water tap might be closed or the water inlet hose kinked.

"Clean pump" P

Waste water is not pumped out. The drain hose may be kinked or the filter must be cleaned (see "Cleaning the filter" in your Instructions for Use).

PROGRAMME END

- All the lights of the programme sequence indicator are off and the "Door open" indication I lights up.
- Turn the programme selector to the "Off/O" position.
 - Close the water tap.
 - Open the door and unload the machine.
 - Leave the door ajar to allow the drum to dry.

CHANGE PROGRAMME AND/OR OPTIONS AFTER PROGRAMME START

- Press the **"Start/Pause"** button ▷|| to pause the programme. The light blinks.
- Select the new programme and, if you want, another spin speed and any options.
- Press the **"Start/Pause"** button ▷|| again. The new programme continues at the same position where the previous programme was interrupted. Do not add detergent for this programme.

CANCEL A RUNNING PROGRAMME BEFORE THE END

The **"Reset"** button R cancels a programme before the end.

- Press and hold the **"Reset"** button R for a few seconds. Any existing water is drained out. It may last some time until the door can be opened.

Whirlpool is a registered trademark of Whirlpool USA

5019 301 06449